




# REQUIRED PARTS & ASSEMBLY STEPS FOR THROUGH-THE-TUBE/FAR END PLUGGING ASSEMBLY

## Extension Rod

(two pieces - extension rod and compression tube)

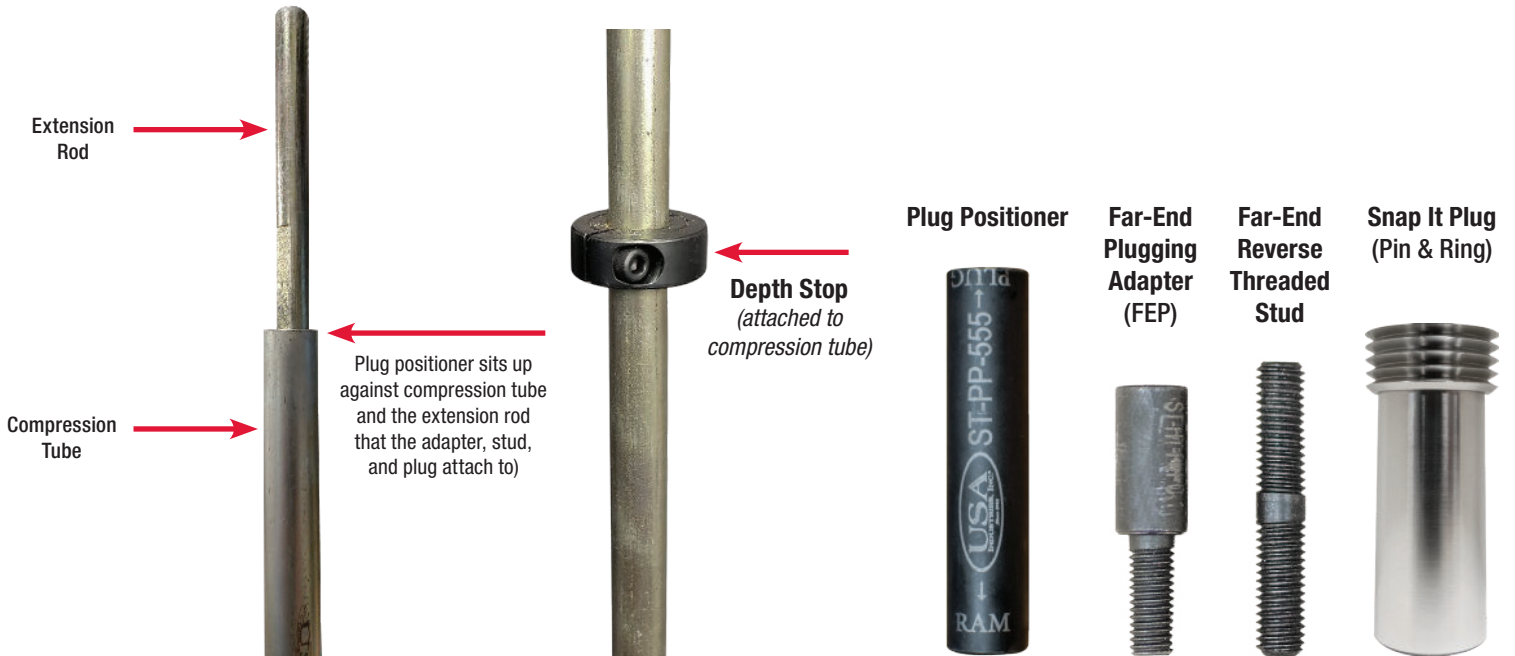

## Sequence of Through-the-Tube threading Pull Rod Assembly



**1**  
Slide Compression Tube over Extension Rod so that Extension Rod Extends Beyond Compression Tube.



**2**  
Place Plug Positioner over Extension Rod so the Plug Positioner Rests atop the Compression Tube.



**3**  
Screw Far-End Plugging Adapter into the Threaded End of the Extension Rod.



**4**  
Screw Far-End Reverse Threaded Stud into Far-End Plugging Adapter.



**5**  
Screw Plug onto the Far-End Reverse Threaded Stud.



**6**  
Rest Base of the Plug Ring onto the top of the Plug Positioner.